



To activate dispensing Disk

1. Cut along inner groove "A".
2. Cut along outer groove "B" to release dispensing disk.
3. Push dispensing disk down through can to dispense product up through 1 inch hole in center of disk.

12 - 4004U